 
 
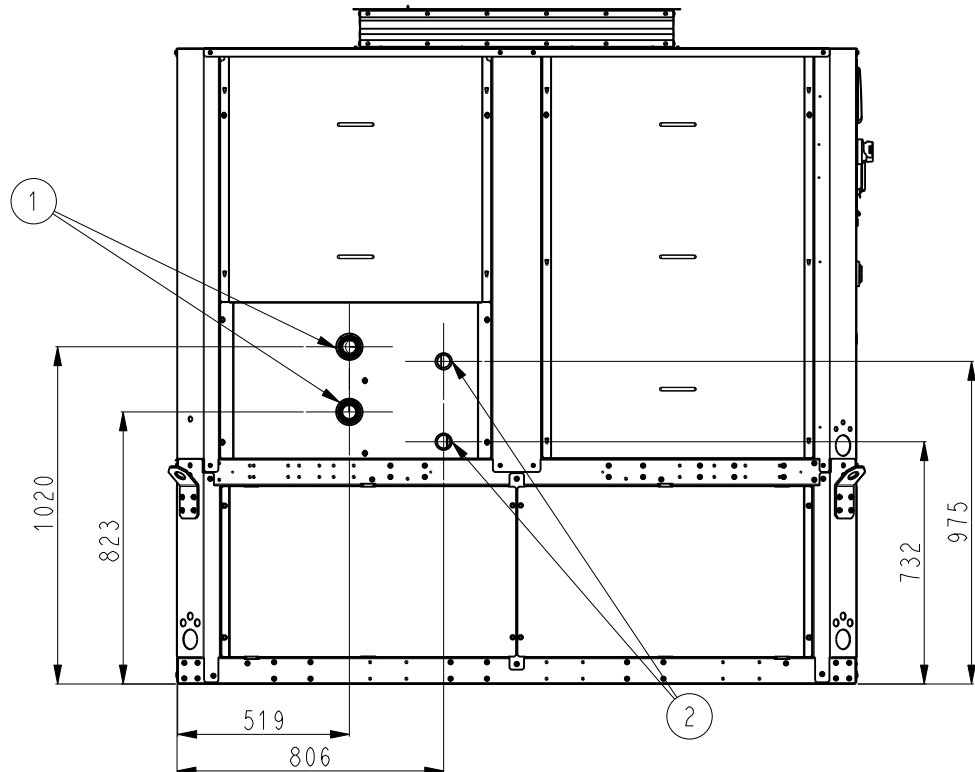 
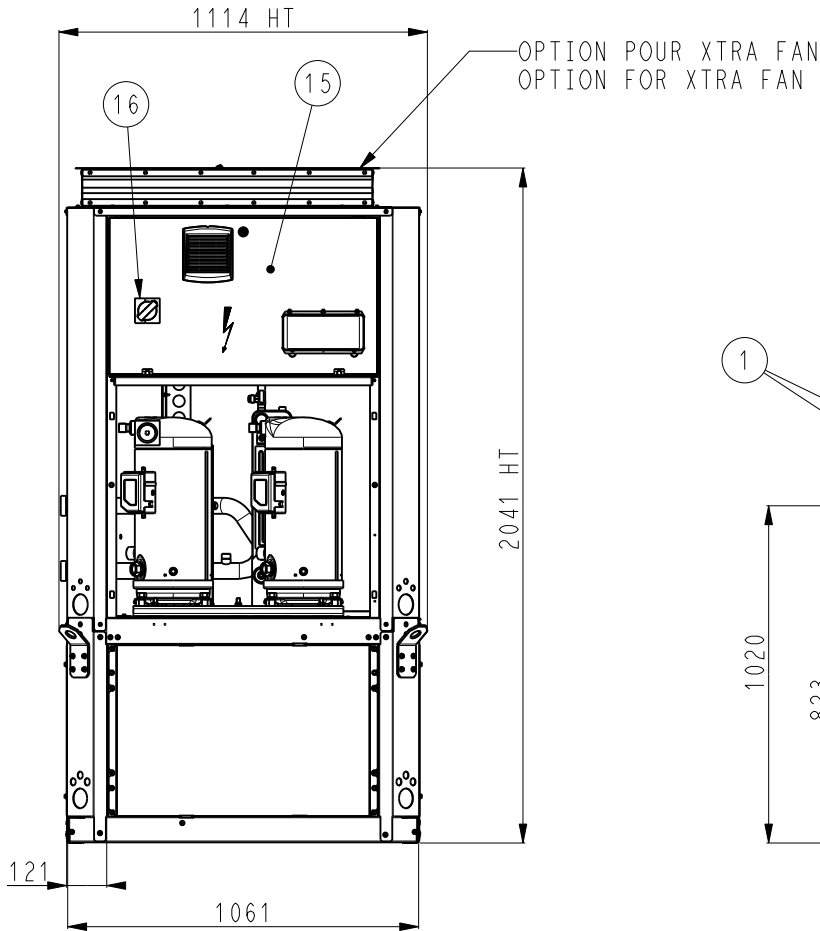 


NXC UNITS	NXC 0044	NXC 0048	NXC 0056	NXC 0064	NXC 0072	NXC 0084
X	947	929	916	889	858	826

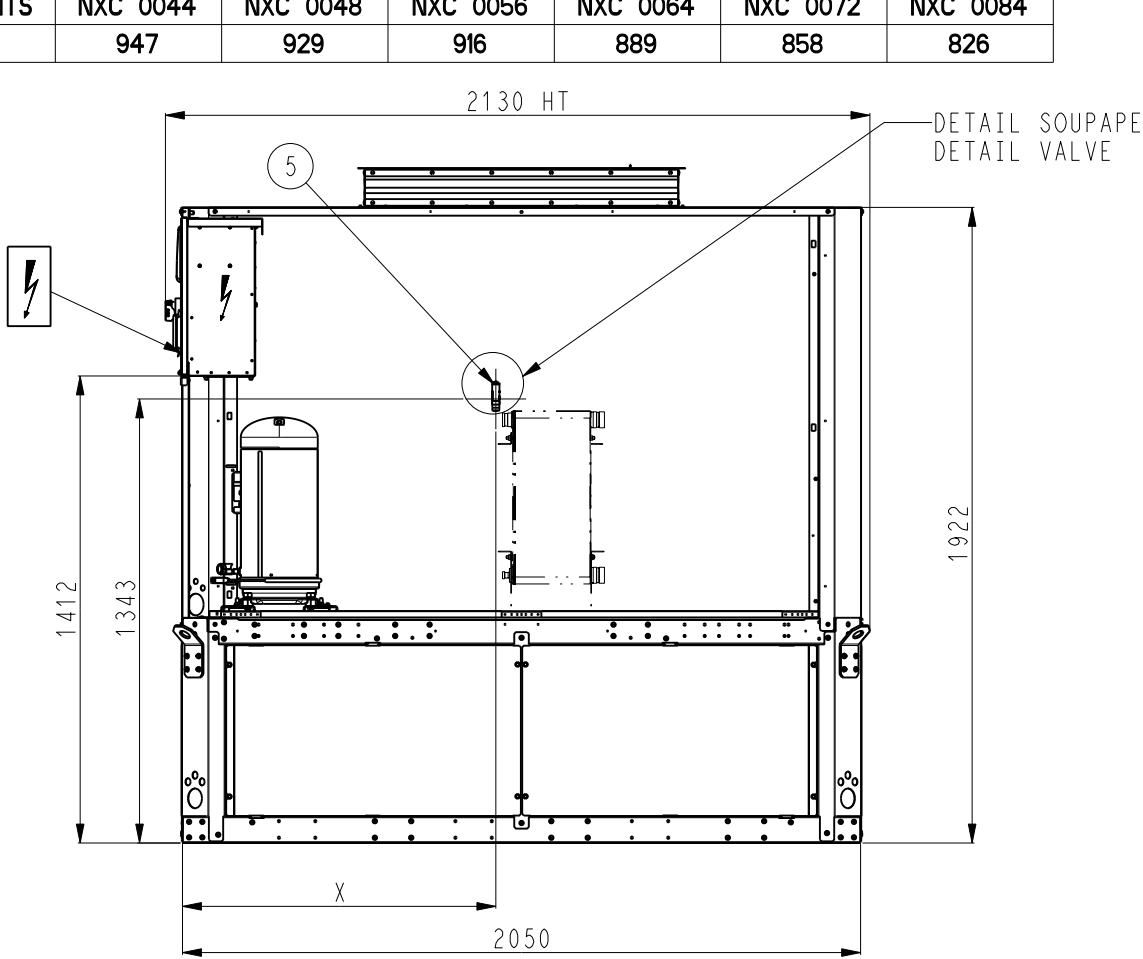 


② OPTION RÉCUPÉRATION PARTIELLE DE CHALEUR SEULEMENT
OPTION PARTIAL HEAT RECOVERY ONLY

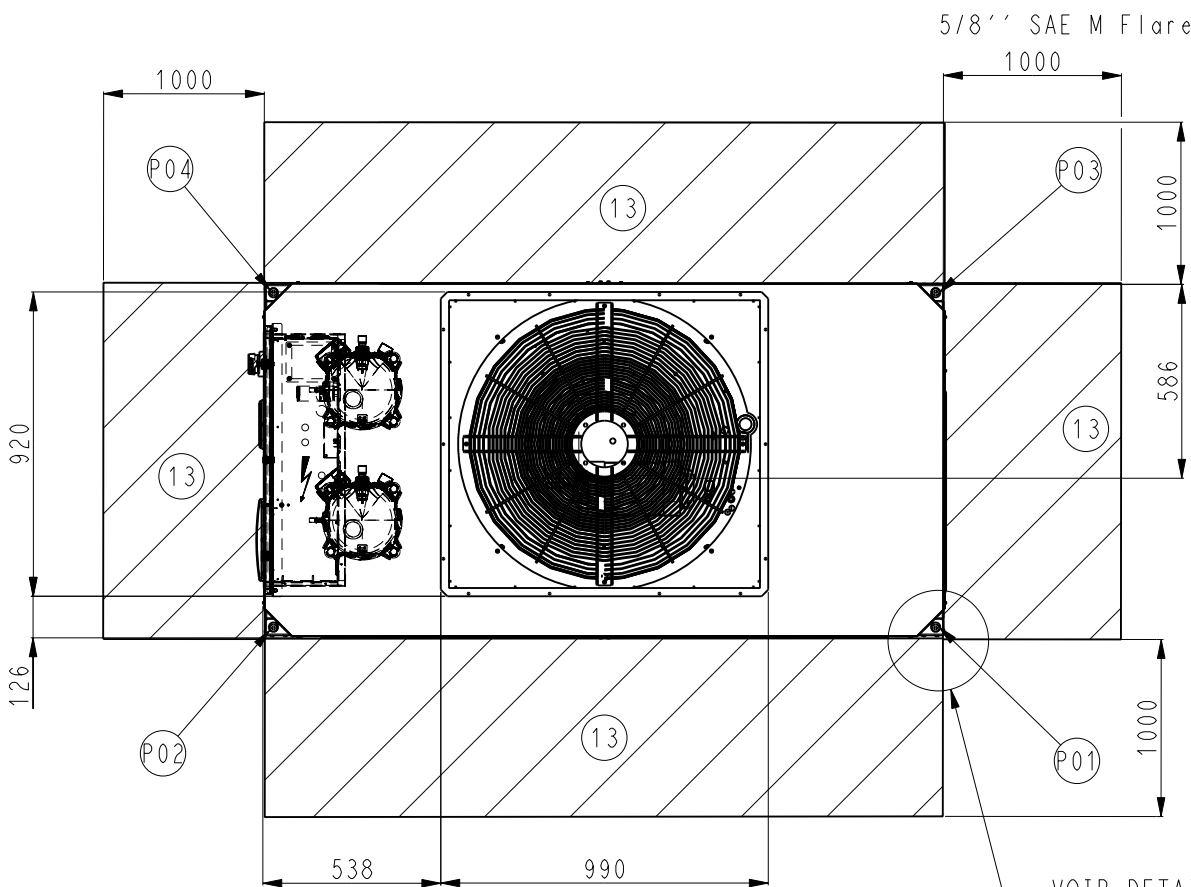


VOIR DETAIL A
SEE DETAIL

DETAIL SOUPAPE 5
DETAIL VALVE



5/8" SAE M Flare

 2" VITAULIC
STYLE 75

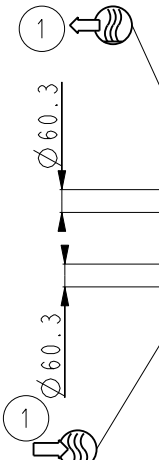

2" VITAULIC
STYLE 75

 
TROU $\varnothing 16$
HOLE

P01 A P04
P01 TO P04


DETAIL A
ECHELLE 7:80

DETAIL FOR 2
DETAIL POUR


1" GAZ CYL MALE

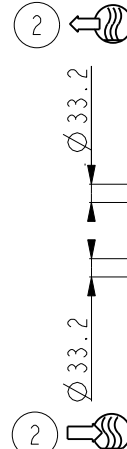

1" GAZ CYL MALE

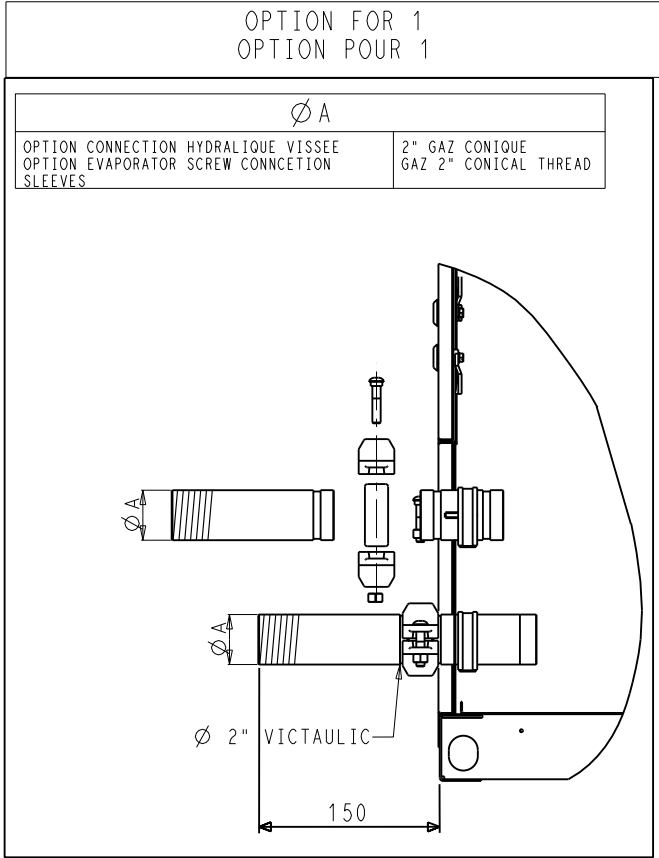 


TOLERANCE	NXC 0044 - 0084	RIELLO	DATE	Feuille
± 10	*		07-05-2016	Sheet
		00DCG000196700		1/4
				Indice
				A

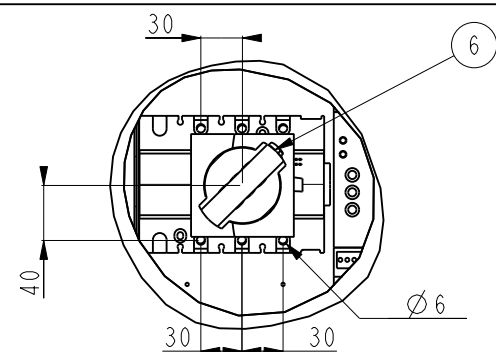 


DETAIL E
ECHELLE 29:160


 
VOIR DETAIL E
SEE DETAIL

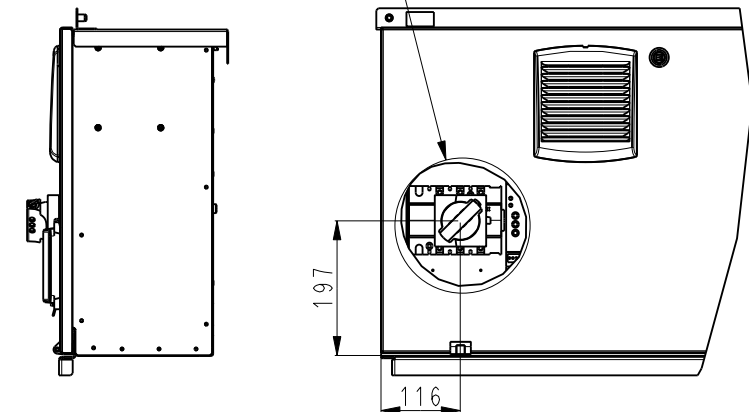


SECTIONNEUR
DISCONNECTER SWITCH

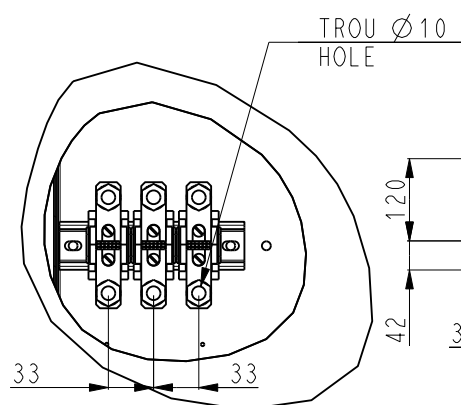 





DETAIL D
ECHELLE 29:160

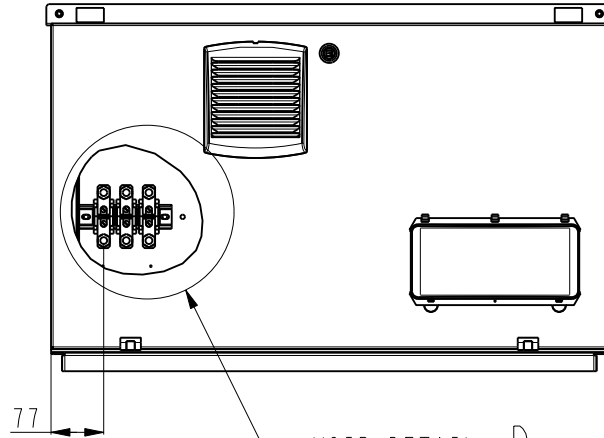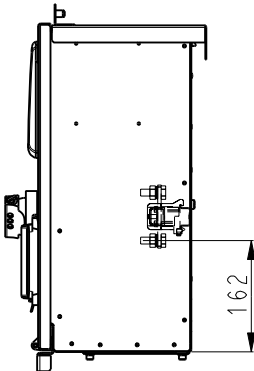  

VOIR DETAIL D
SEE DETAIL

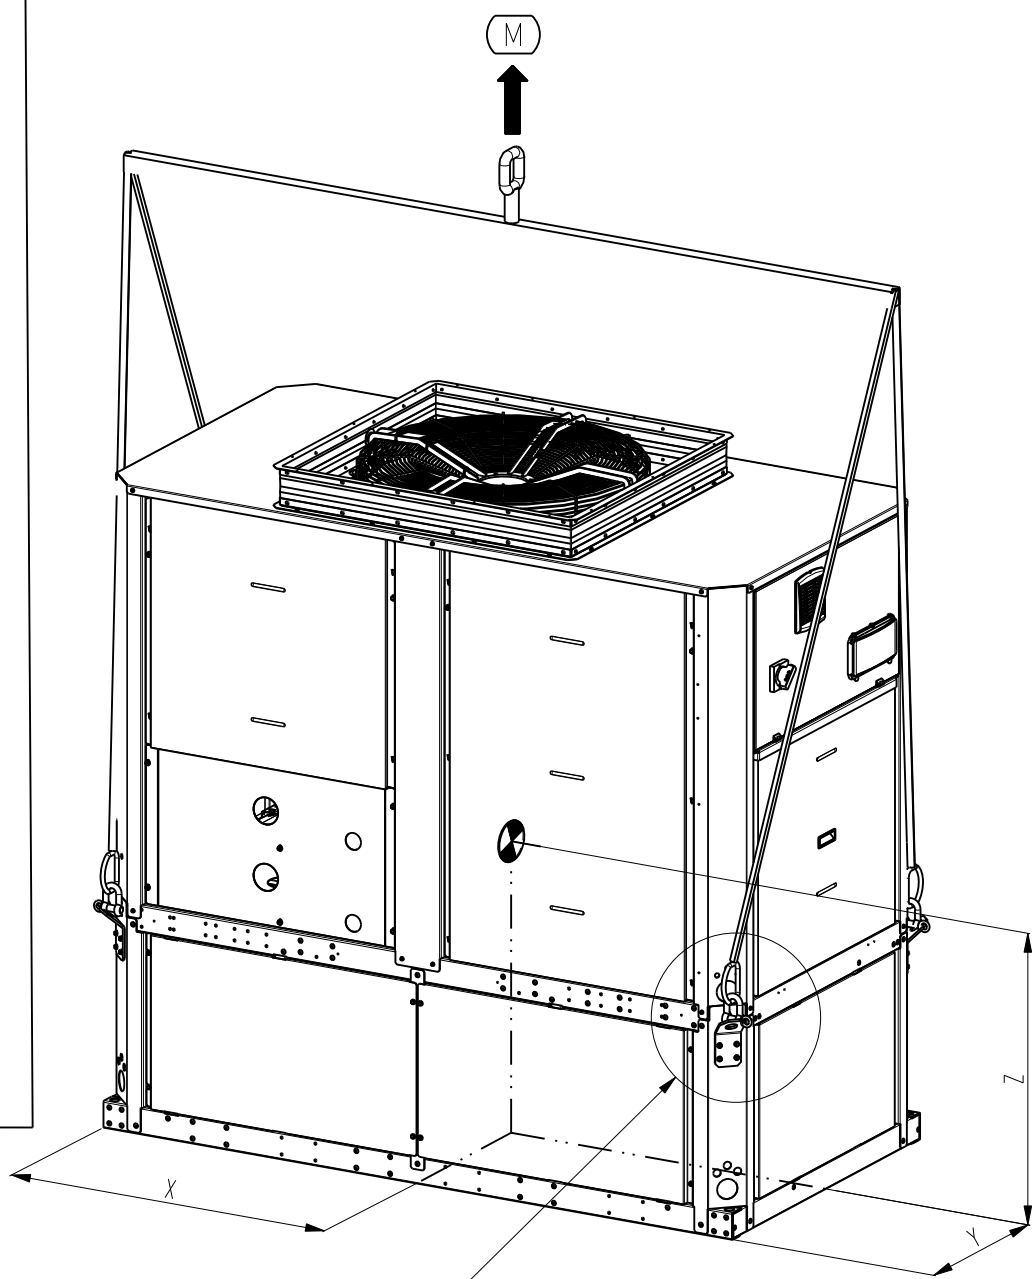 


VOIR DETAIL D
SEE DETAIL

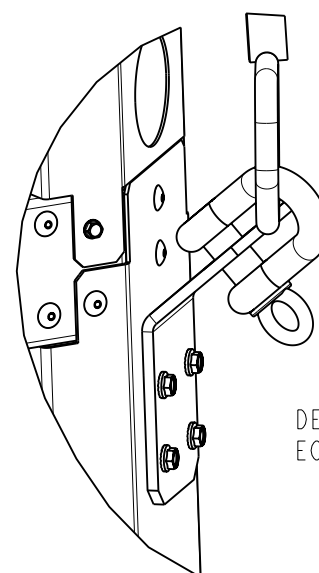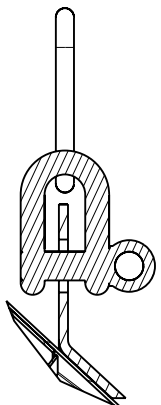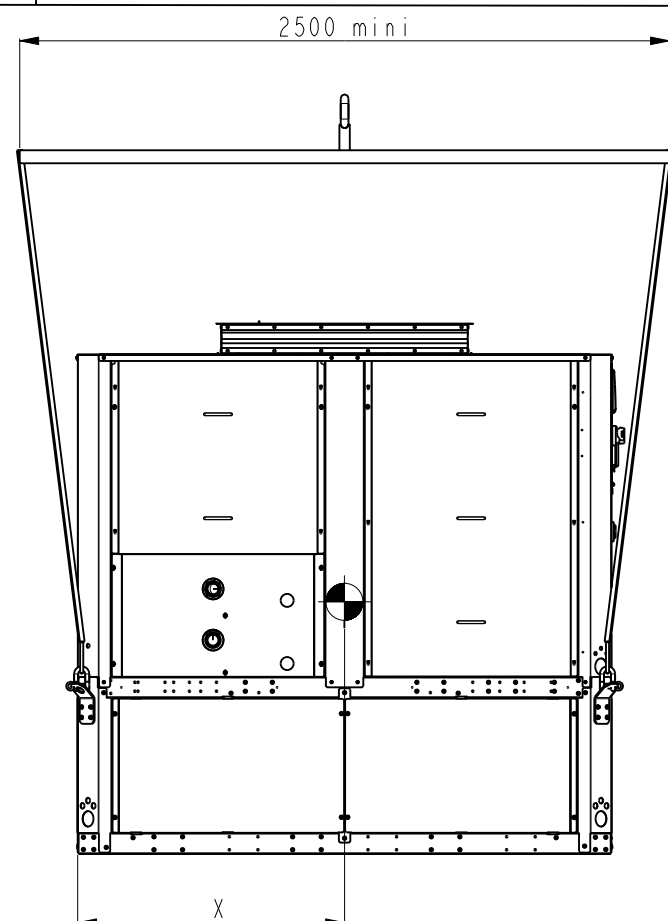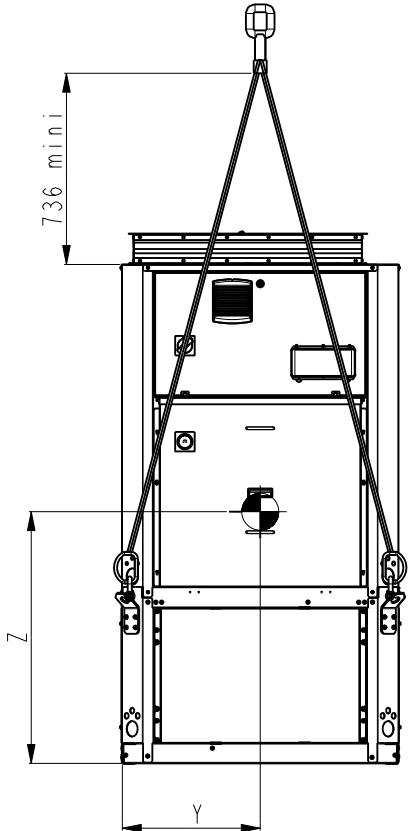    

DETAIL D
ECHELLE 3:32

TOLERANCE	NXC 0044 - 0084	RIELLO	DATE	Feuille
±10	*		07-05-2016	Sheet
		00DCG000196700		2/4
				Indice
				A

 
NXC 0044

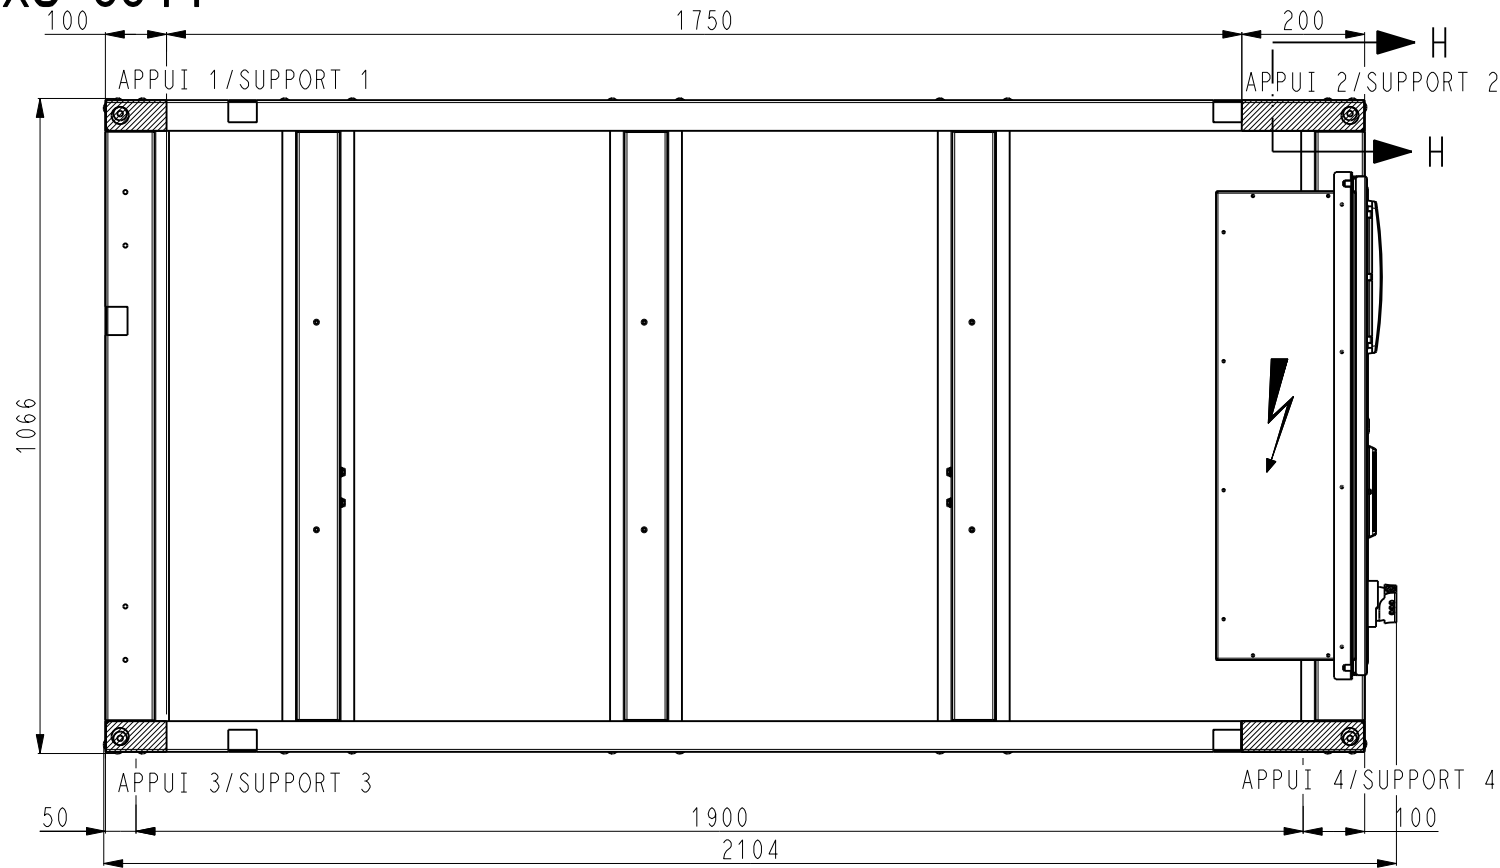

APPUI / SUPPORT

COUPE/SECTION H-H
ECHELLE 1:4

 NXC 0048/0056

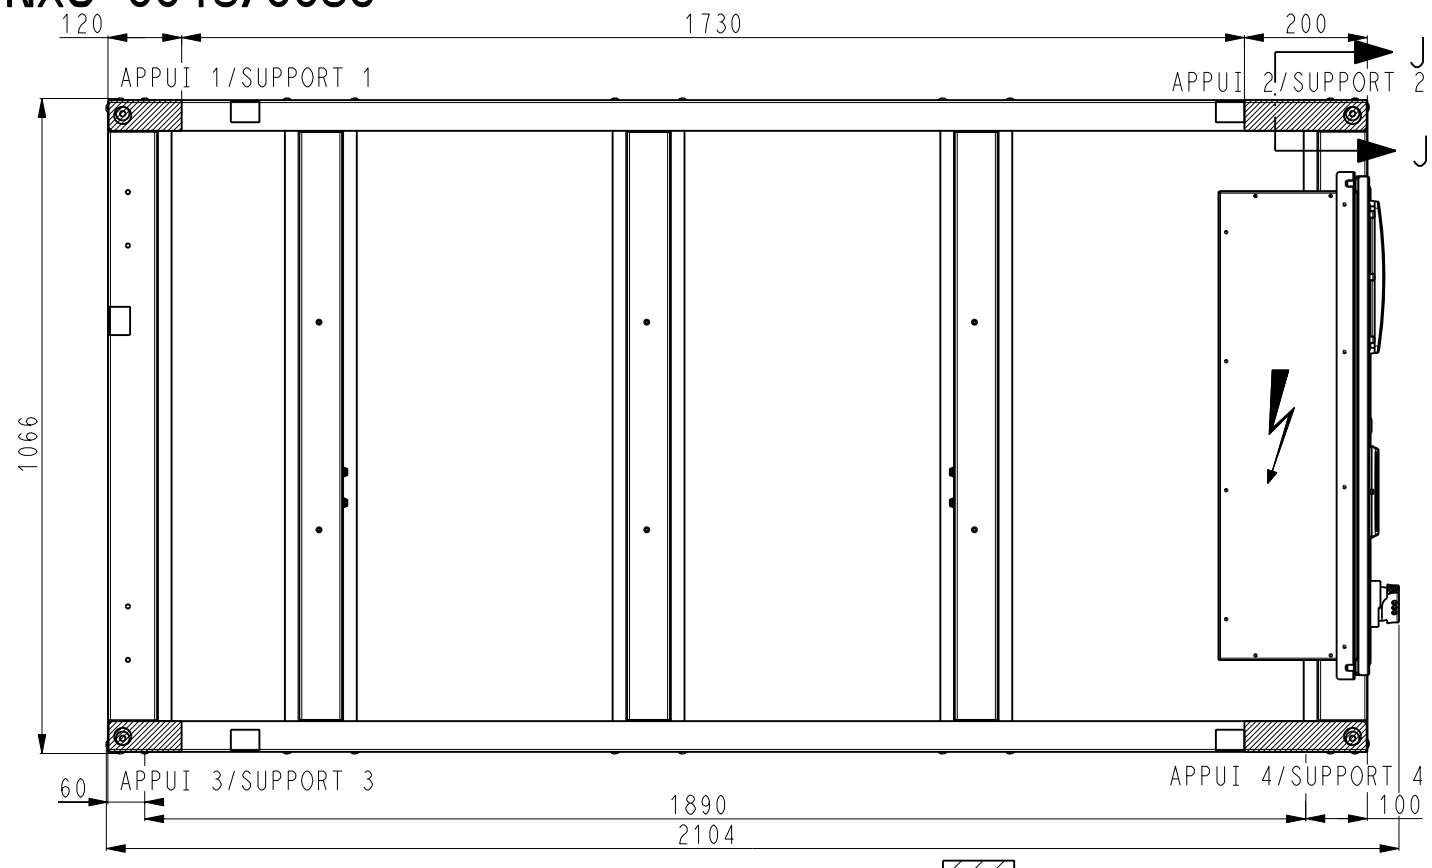


APPUI / SUPPORT

COUPE/SECTION J-J
ECHELLE 1:4

 OPTION PLOTS ANTIVIBRATILS ANTI-VIBRATION MOUNTS OPTION


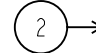


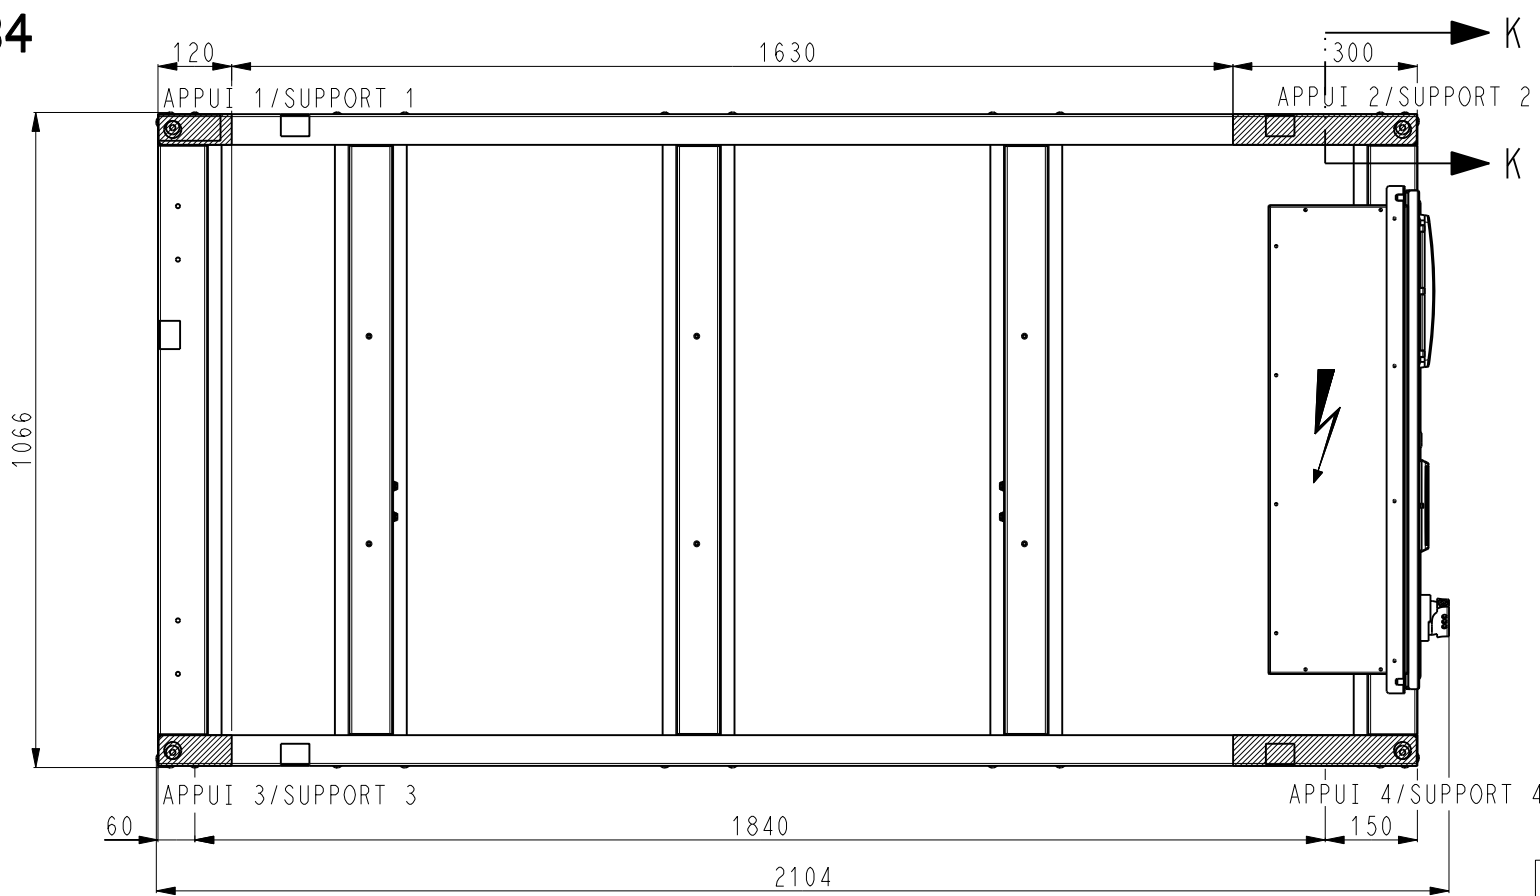




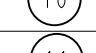
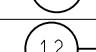

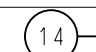








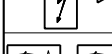

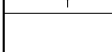


NXC 0064/0072/0084



APPUI / SUPPORT

COUPE/SECTION K-K
ECHELLE 1:4

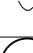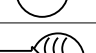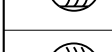TOLERANCE	NXC 0044 - 0084	RIELLO	DATE	Feuille
±10	*		07-05-2016	Sheet
		00DCG000196700		3/4
				Indice
				A

					00DCG000196700 A
	ENGLISH	FRANCAIS	GERMAIN	ESPANOL	ITALIANO
	Unit water inlet and outlet	Entrée et sortie eau unité	Wasser eintritt und austritt	Entrada y salida agua unidade	Entrata e uscita acqua unita
	Water inlet and outlet PARTIAL HEAT RECOVERY	Entrée et sortie eau RÉCUPÉRATION PARTIELLE DE CHALEUR	Eintritt und austritt TEILWÄRMERÜCKGEWINNUNG	Entrada y salida agua RECUPERACIÓN PARCIAL DE CALOR	Entrata e uscita acqua RECUPERO DI CALORE PARZIALE
	N/A	N/A	N/A	N/A	N/A
	NA	NA	NA	NA	NA
	Safety relief valve	Soupape de sécurité	Verdampfer sichereitsventil	Valvula de seguridad	Valvola di sicurezza
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	NA	NA	NA	NA	NA
	Services clearances required	Espace nécessaire à la maintenance	Freiraum für wartung	Espacio necesario para servicio y mantenimiento	Spazio necessario per il servizio
	NA	NA	NA	NA	NA
	Electrical box	Coffret électrique	Schaltschrang	Caja electrica	Pannello elettrico
	Main disconnect switch	Interrupteur général	Haupttrennschalter	Interruptor de desconexion principal	Sezionatore general
	N/A	N/A	N/A	N/A	N/A
	Power supply unit recommend section wire (see IOM)	Raccordement électrique unité section recommandée (voir IOM)	Hauptelektrische anschluss querschnitt (IOM sehen)	Conexiones electricas unidade section recomendada (ver IOM)	Conezione elettrica de l'unità sezione racomandato(vedi IOM)
	Total operating weight standard unit	Poids total en fonctionnement de l'unité standard	Betriebsgewicht standard machine	Peso total en el funcionamiento une el estándar	Peso totale in funzionamento dell' unita standard
	Inlet water	Entrée eau	Wasser eintritt	Entrada agua	Entrata acqua
	Outlet water	Sortie eau	Wasser austritt	Salida agua	Uscita acqua
	Electrical supply entry	Entrée raccordement électrique	Strom Anschlüsse	Entrada cables electricos	Entrata cavi alimentazione
	NA	NA	NA	NA	NA
	Center of gravity	Centre de gravité	Maschinenschwerpunkt	Centro de gravedad	Centro di gravita
	Handling Rigging of the unit: the sizing of the rigging or lifting elements is the responsibility of the installer	Manutention de l'unité Le dimensionnement des éléments de manutention ou de levage sont sous la responsabilité du manutentionnaire	Anheben des geräts Der installateur ist für die dimensionierung der hebeelemente verantwortlich	Sostieniento de la unidad Las dimensiones de los elementos de sostieniento o levantamiento es responsabilidad de instalador	Sollevamento dell'apparechio La responsabilita del dimensionamento degli elementi di sistema di sollevamento e di pertinenza dell'installatore
				TOLERANCE ±10	NXC 0044 - 0084 *
					DATE 07-05-2016
				00DCG000196700	Feuille Sheet 4/4 Indice A