

I **Kit distanziale**
GB **Spacer kit**

CODICE - CODE	MODELLO - MODEL
20103452	R40 G15 - G20

1 Avvertenze generali

1.1 Garanzia e responsabilità

I diritti alla garanzia ed alla responsabilità decadono, in caso di danni a persone e/o cose, qualora i danni stessi siano riconducibili ad una o più delle seguenti cause:

- intervento di personale non abilitato;
- esecuzione di modifiche non autorizzate all'apparecchio;
- alimentazione del bruciatore con combustibili non adatti;
- difetti nell'impianto di alimentazione del combustibile;
- riparazioni e/o revisioni eseguite in maniera scorretta;
- utilizzo di componenti non originali, siano essi ricambi, kits, accessori ed optional;
- cause di forza maggiore.

Il costruttore, inoltre, declina ogni e qualsiasi responsabilità per la mancata osservanza di quanto riportato nel presente manuale.

- Il personale deve usare sempre i mezzi di protezione individuale previsti dalla legislazione e seguire quanto riportato nel presente manuale.
- Il personale deve attenersi a tutte le indicazioni di pericolo e cautela segnalate sulla macchina.
- Il personale non deve eseguire di propria iniziativa operazioni o interventi che non siano di sua competenza.
- Il personale ha l'obbligo di segnalare al proprio superiore ogni problema o situazione pericolosa che si dovesse creare.

1.2 Note sulla sicurezza per l'installazione



PERICOLO

Tutte le operazioni di installazione, manutenzione e smontaggio devono essere svolte con l'alimentazione elettrica staccata.



PERICOLO

Isolare l'alimentazione del combustibile.



ATTENZIONE

L'installazione deve essere svolta da personale qualificato, come indicato in questo manuale e in conformità con gli standard e le disposizioni di legge in vigore.



CAUTELA

Dopo aver tolto ogni imballaggio assicurarsi dell'integrità del contenuto. Nel dubbio, non utilizzare il kit; rivolgersi al fornitore.



Attendere il completo raffreddamento dei componenti a contatto con fonti di calore.



Effettuate tutte le operazioni di manutenzione, pulizia o controllo, rimontare il cofano e tutti i dispositivi di sicurezza e protezione del bruciatore.

2 Kit distanziale

2.1 Installazione

Il distanziale ha lo spessore di 15 mm (quota C).

Il distanziale ha una doppia funzione:

- aumentare la distanza B (Fig. 1), quando eventuali sporgenze della caldaia lo richiedano;
- ridurre la distanza A (Fig. 2), quando la camera di combustione è particolarmente corta.

Per applicare uno o due distanziali, procedere come segue:

- svitare i dadi 1) e 2) (Fig. 3);
- togliere la vite 3);
- inserire nella flangia 6) la vite 4) o 5) a seconda che si debbano installare uno o due distanziali 7);
- inserire i distanziali necessari sulla flangia 6);
- bloccare con il dado 2).

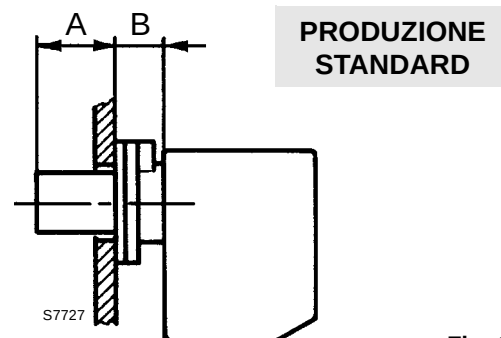


Fig. 1

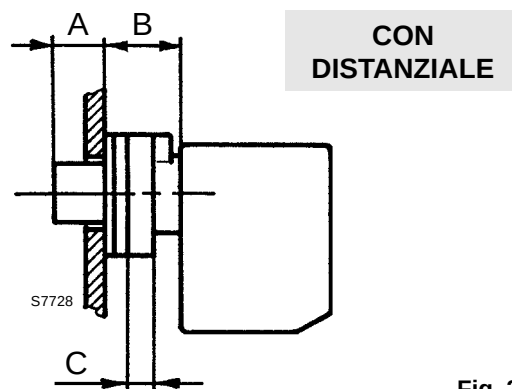


Fig. 2

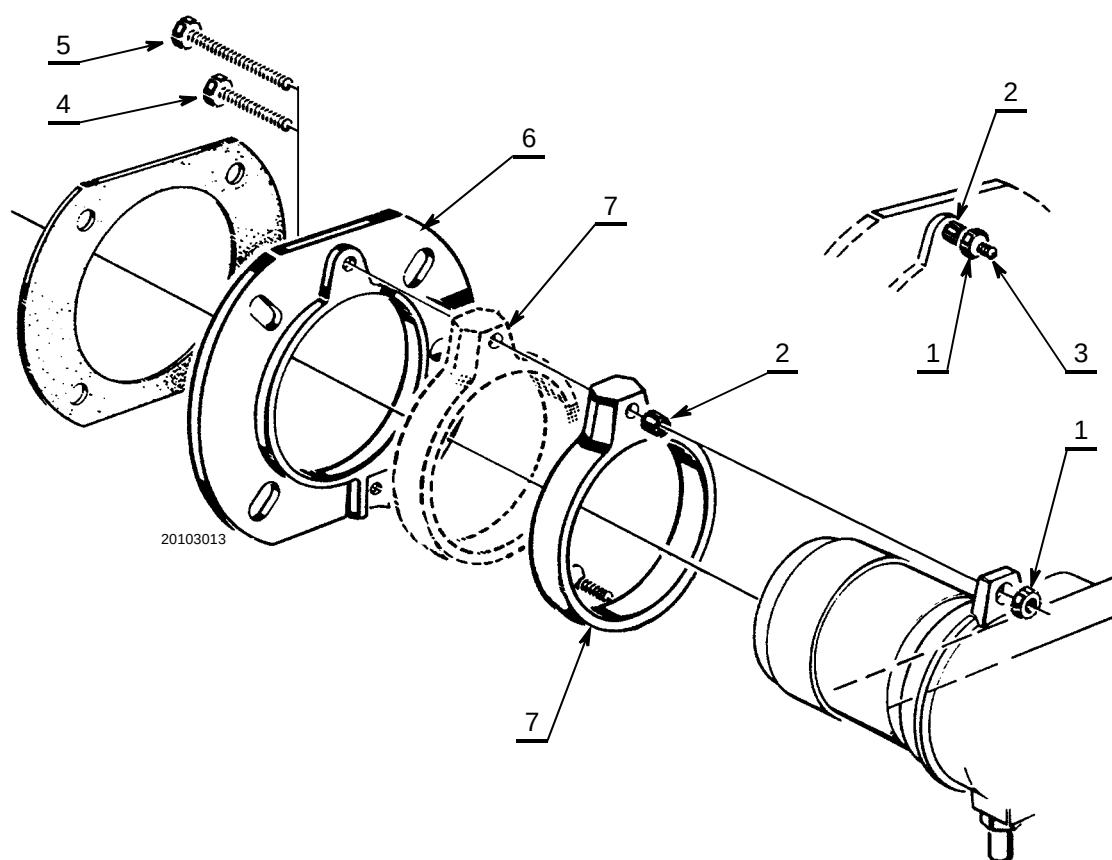


Fig. 3

1 General warnings

1.1 Guarantee and responsibility

The rights to the guarantee and the responsibility will no longer be valid in the event of damage to things or injury to people, if such damage/injury was due to any of the following causes:

- intervention of unqualified personnel;
- carrying out of unauthorised modifications on the equipment;
- powering of the burner with unsuitable fuels;
- faults in the fuel supply system;
- repairs and/or overhauls incorrectly carried out;
- use of non-original components, including spare parts, kits, accessories and optional;
- force majeure.

The manufacturer furthermore declines any and every responsibility for the failure to observe the contents of this manual.

- Personnel must always use the personal protective equipment envisaged by legislation and follow the indications given in this manual.
- Personnel must observe all the danger and caution indications shown on the machine.
- Personnel must not carry out, on their own initiative, operations or interventions that are not within their province.
- Personnel must inform their superiors of every problem or dangerous situation that may arise.

1.2 Installation safety notes



DANGER

It is obligatory to carry out all installation, maintenance and dismantling operations with the electricity supply disconnected.



Wait for the components in contact with heat sources to cool down completely.



DANGER

Isolate the fuel supply.



After carrying out maintenance, cleaning or checking operations, reassemble the hood and all the safety and protection devices of the burner.



WARNING

The installation must be carried out by qualified personnel, as indicated in this manual and in compliance with the standards and legal requisites in force.



CAUTION

After removing all the packaging, check the integrity of the contents. If in doubt, do not use the kit; contact the supplier.

2 Spacer kit

2.1 Installation

The spacer is 15 mm wide (measurement C).

The spacer has a double function:

- increase the distance B)(Fig. 1), should an eventual boiler projection render this necessary;
- reduce the distance A)(Fig. 2), when the combustion chamber is particularly short.

To fit the spacer, proceed as follows:

- unscrew the nuts 1) and 2)(Fig. 3);
- remove the screw 3);
- insert the screw 4) or 5) into the flange 6), depending on whether one or two spacers are fitted 7);
- insert the required spacers on the flange 6);
- secure the nut 2).

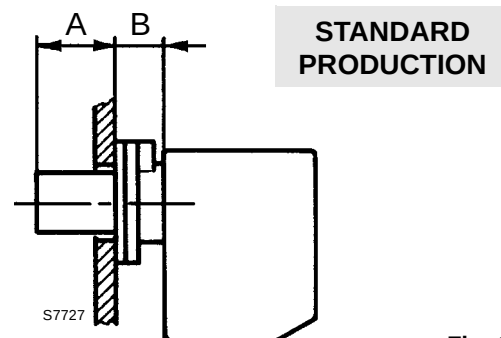


Fig. 1

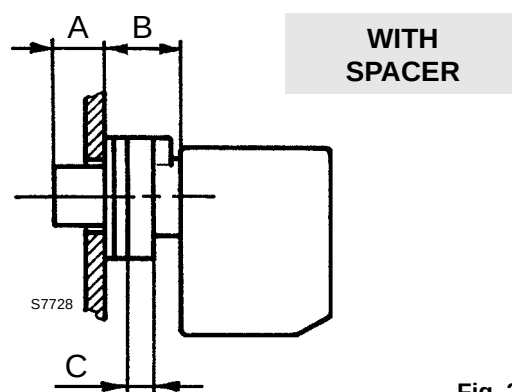


Fig. 2

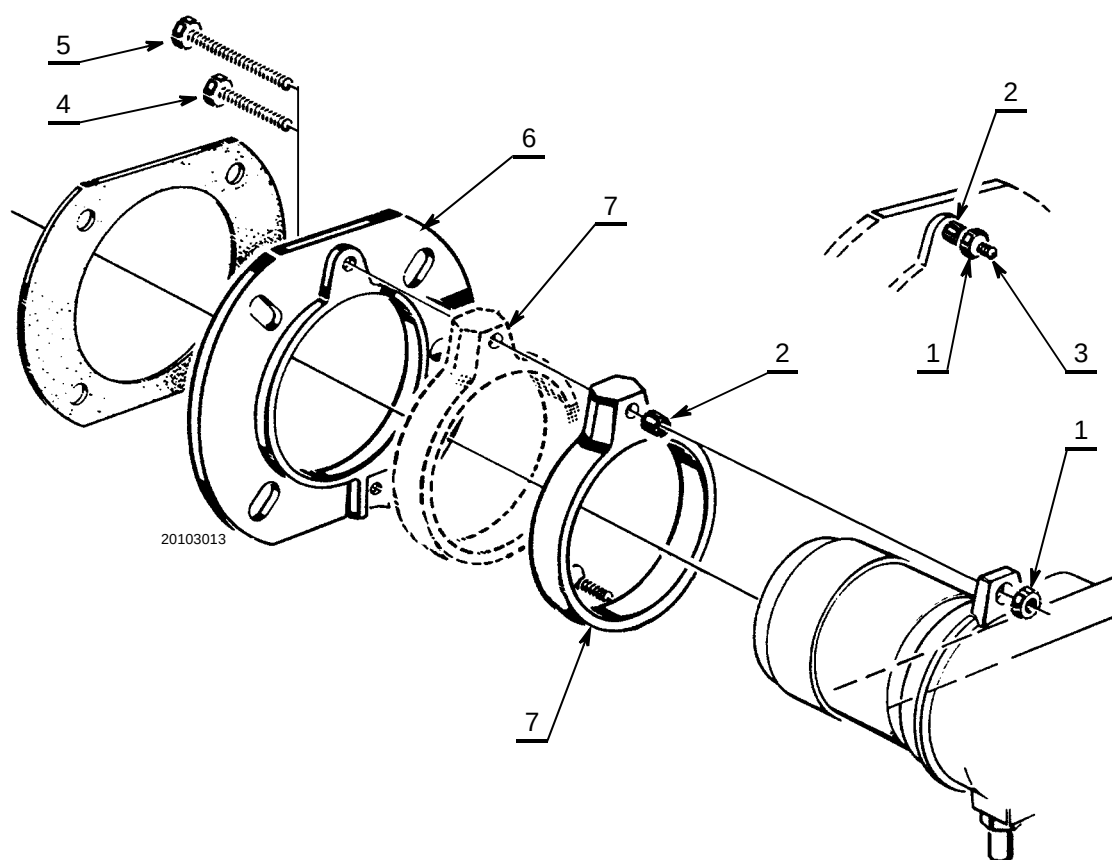


Fig. 3

